


# User Manual



Model: FW-3150

Science and technology lead a new life

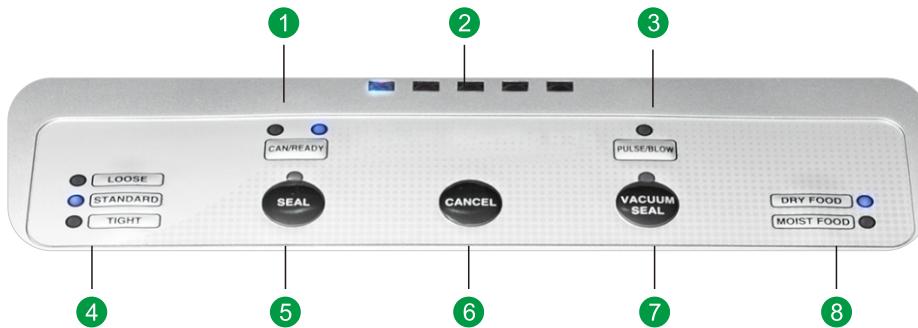

## 1 Vacuum Canister Model Setting

Canister vacuum—connect the vacuum sealer gas nozzle to vacuum

## 2 Vacuum indicator light

The number of Indicator lights shows the progress of vacuum operation

## 3 PULSE/BLOW

PULSE--Manual start and stop to control air removal when storing delicate foods like muffins and baked goods.  
BLOW--Put the vacuum nozzle align "Blow" icon and press will start operation, leave will stop. Could see clearly bag gas expansion to protect internal food.

## 4 Vacuum model setting

LOOSE—This model is only suitable for vacuuming a large amount of moist food ,Middle or small bag can reach the best effects .

STANDARD—Apply to moist and dry food ,suitable for all kind of vacuum bags

TIGHT—Stronger vacuum power,only suitable for Dry food .Higher vacuum degree,meet the demand of industry,available for the demand of high vacuum.

## 5 Seal

Seal bag without vacuuming

## 6 Cancel

Control the vacuum effect by pressing this button .

## 7 Vacuum & Seal

Vacuum and seal the bags and stop automatically after finishing working

## 8 Dry & Moist Food

Dry food -Default Standard indicator lights on , normal vacuum .Tight function also available for dry highly vacuuming food .

Moist food - Default Standard Indicator lights on ,suitable for large bag vacuuming ;Loose button is suitable for small and washy bag vacuum.

## FW-3150 Vacuum accessories operation and Maintenance

### Works with the vacuum canister and vacuum stopper

1. Put the food into the vacuum canister,mark the storage date on the cover
2. Connect the canister with vacuum tube,make sure both ends of the vacuum tube tightly,in case of air leaking out when vacuuming the canister.
3. First press can button and than press the vacuum sealing button,when it finished, the indicator will light off.
4. Pay attention to the heating wire,when the motor sound disappeared, heating start.
5. Gently pull out the vacuum tube.
6. When the cover of the vacuum canister can not open, it means already in a vacuum situation.



### How to operate with the vacuum canister and the vacuum stopper

1. Take the wine stopper on the bottleneck, Use the vacuum tube to connect the stopper let the machine power on.
2. Press the button "vacuum can". It will work automatically.

### Cleaning and Maintenance

#### Cleaning:

Take off the plug, avoid the water. use the dishcloth to wash the gasket and the drip tray.

The gasket on the cover of the machine is fixed, don't take it down to wash it.  
The gasket can be washed with soap water or cleanser essence.

Take the drip tray and wash it after vacuuming sauced or succulent food.

### ATTENTION

If long time no use,open the upper cover of the vacuum machine to avoid the impact of the deformation of the sponge.

## FW-3150 Vacuum Sealer Breakdown& Maintenance

### Situations      Solutions

Sealing indicator light flashing

Product overheating,Please stop for 20 seconds between two adjacent cycles. Intensive continuous use will trigger the overheating protection system.The machine will automatic stop and flash red light . Please stop for 20 minutes to cool the product completely . Vacuum pump works over 120s , the machine will automatic stop and flashing red light (Please refer below chapter "Vacuum pump is running, but could not vacuum").

Vacuum pump is running, If use the vacuum bag cut down from roll bag , and both two sides not seal , please check the first sealing line flat or not .

Leave 7cm space between food and bag edge .Place the embossed side of the bag face down on the machine.  
Please check the gasket ring if out of shape, the upper gasket ring if have food residue.  
Please check the bag if have fold. And please hold the two side of bag to keep bag in flat.  
If not use and two side lock not open, the gasket ring will out of shape and caused vacuum air tightness to reduce which will affect use. So please open two side lock button and machine for 30 minutes to help gasket ring instauration flexibility.

Gasket ring is loose or damaged

If it's under gasket ring,take out and clean,then install back.  
If it's upper gasket ring,Please wipe and install back then retry again. if still doesn't solve the problem. Please contact with our dealers.


The sealing effect is not good

Sealing the food with a small amount of liquid ,please press the" seal "button to seal again .if a large amount of liquid or pure liquid ,please frozen to solid ,then vacuum again.  
Please check the high temperature tape and sealing strip have food powder or residue.If have,please clean up.  
If bag is folding,please hold the two side of bag to keep bag in flat.


Indicator light does not light on control panel.

Please check if it have connect the power source or not.  
Please check if the power source switch is well or not .  
Please check the machine cover lock well or not .


## FW-3150 vacuum roll bag operation steps

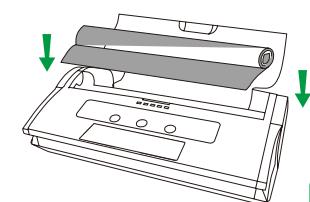


Step One

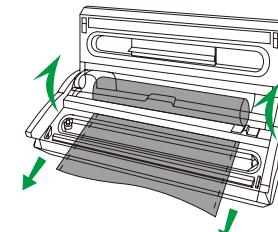


Step Two

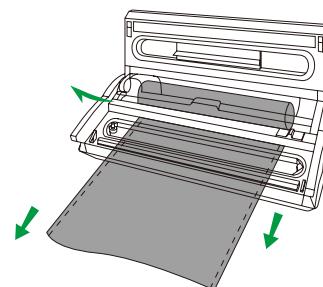

Step Three

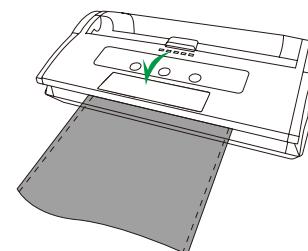


Step Four

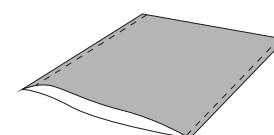

Step Five


## FW-3150 vacuum piece bags operation steps

1. Take out one piece bag and put the food inside it , (The food should be less than three fourths of the bag)

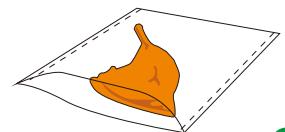


Step One

2. Put the bag with the food on the vacuum chamber but no exceeding the vacuum nozzle .

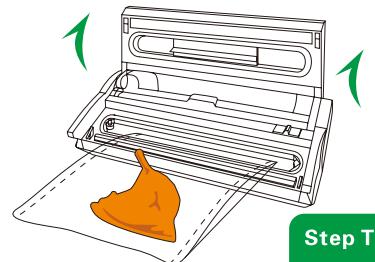

Step Two

3. Close the vacuum cover lightly , press the lock,then press the vacuum sealing button.

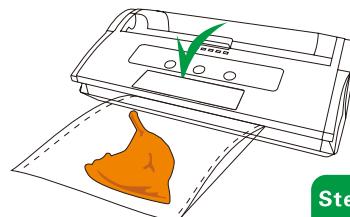

Step Three

4. Open the vacuum cover,take out the sealed food after indicator light is off.



Step Four

## FW-3150 Vacuum Sealer Safety guidelines and prompt

### Safety guidelines

Please follow the basic principles .

1. Please read all the contents carefully before using .
2. Prohibit using on wet surface or outdoor using .
3. please don't put any parts ( power cord , plug ) into any liquid . Please put off plug when not use or before clean .
4. To power off, unplug the plug from the power outlet .
5. Do not use when power line , plug or machine have any matters or damage . Please contact the dealer to arrange after-sales service.
6. Note: A short power cord can avoid winding knot and children stumble . If need to use the extension line ,
7. Do not put the machine near the gas, induction cooker, and electric oven.
8. After continuous use for some time,take a break for 20s in order to avoid overheating.

### Usage prompt

1. Vacuum packing can let the food isolated from microorganisms in air instead of killing the one in the food itself. Perishable foods
2. Please use embossed vacuum bag
3. If there is a few liquid, debris or food particles into the vacuum slot with air during the vacuum packing process, please clean up after use.
4. Please leave about 7cm space between food and bag edge
5. In order to avoid bag folding , please make the bag flat when vacuum packing large object .
6. When vacuum the sharp items , please wrap with the soft material to avoid bag puncture .
7. When using vacuum canister ,please leave at least 3cm between food and lid

Power	110V/240V 50Hz/60Hz 150W(Seal) 54W(Vacuum)
Certification	CE/ROHS/EMC/LVD
Materials	ABS
Working style	Fully-automatic vacuum seal ,manual vacuum and seal
Vacuum pressure	-75Kpa--85Kpa
Sealing length	≤35cm
Size	450mm*245mm*118mm
NW	3.5kg